



# DCHDMI

## QUICKSTART GUIDE

# 1. IN-GAME MENU

The DCHDMI has a robust in game menu which allows you to do a bunch of cool stuff.

To access the in-game menu

**PRESS L + R + A + X + Start**

- Add scan-lines
- De-interlace & Add Filters
- In-Game Reset
- Video Mode Settings "FORCE VGA" , "CABLE DETECT" ETC.



The relaxed firmware branch is in Firmware Upgrade > Configure. After activating this, when begin your firmware update it will allow for a different branch of experimental firmwares. The firmwares might not be 100% compatible. If at any point you get a black screen or weird issues revert back to standard!

# 2. ONLINE MENU

Once the DCHDMI is connected to your network you can configure the DCHDMI without using a controller.

- Initial setup of the DCHDMI must be done through the wifi settings feature in the OSD. The DCHDMI can also act like a access point so it can be easily configured through your phone.
- Highly recommended, just in case you make any irreversible changes. It is quick and easy to get DCHDMI to the correct settings.

```
System upgrade procedure:
1) Use check to see, if any updates are available.
2) If updates are available, use download to stage the updates.
3) Use flash to apply the updates.
4) Use reset to restart DCHDMI with the updates.

- Use config to display current configuration.
- Use setup to update the configuration.

Basic commands:
check ..... check if new firmware is available
download ..... download latest firmware set
flash ..... flash firmware set from staging area
reset ..... full DCHDMI reset
setup ..... enter setup mode
config ..... get current setup
clear ..... clear terminal screen
exit ..... end terminal
```

A list of basic commands for the terminal screen.

## EXTRA NOTES

- OUTPUT RESOLUTION > VGA is the most compatible resolution use this when switching to a new TV.
- \*DCHDMI's must be in relaxed mode to use HQ2X filter. Note 1080p & 960p in this feature is experimental and may not work with all TV's!
- If wifi can't connect or isn't configured the DCHDMI will need 30 seconds before the OSD will display.
- Holding DOWN on the D-Pad while turning on will force the system into cable select mode. (Useful if you are getting a black screen)
- Please be careful when updating firmware!

THANK YOU FOR  
SHOPPING WITH US

*IT MEANS ALOT!*